



Quick Start Guide for 'Texcellent' Remote Control

Notes:

DWN, UP, LEFT & RIGHT are the 4 arrow buttons on the remote.

Point the Remote Control at the little window on right hand side of the sign.

The sign 'Beeps' every time a button is pressed as an acknowledgement.

First time operation requires deletion of existing messages and sequences.

Delete all messages:

Press *PROGRAM*>(1. File Operate) *ENTER*>*DWN*> (2. Del all files) *ENTER* (Del All[D:\T]) *ENTER*> (DelSure?(Y/N)) *Y*>*ESC*>*ESC*>*ESC* (1. File Operate).

Delete all sequences:

From '1.File Operate' press *ENTER*>*DWN*>*DWN*> (3.Del Sequence) *ENTER*> (DelSure?(Y/N)) *Y*>*ESC*>*ESC*

You should have a blank screen at this stage and are now ready to enter a message.

Entering Messages:

Let's assume you want a scrolling message (best to scroll from right to left otherwise its hard to read!).

Press *PROGRAM*> (1.File Operate) *DWN*> (2.Edit File) *ENTER*> (Edit [D:\T_])

In the flashing cursor enter a 'File Name', this is any character a-z, A-Z or 0-9.

Enter *1*> *ENTER*

You are now ready to enter your message.....type away! Example: type *HELLO EVERYBODY.....THE DRINKS ARE ON ME!* Note the characters appear after the cursor like any computer.

To get lowercase characters press *CAPS* and *CAPS* again for capitals.

To test the message press *SIMULATOR* the message will run once and go back to Edit Mode.

Notice the message is broken up? You need to turn off Word Wrap.

Press *SHIFT+SPEED(F4)*> (1.Wrap Word) *DWN*> (2.Not Wrap) *ENTER*>

Press *SIMULATOR* again and the message now scrolls right to left!

Congratulations, you've now created you first message.

You can now save it: press *SHIFT+SAVE&EXIT* the editor closes and the message 'Runs'.

Now read the Manual through to get to know how to change fonts, effects, time & date and many more functions.

MessageMaker Displays Limited

2 Miltons Yard, Petworth Road, Witley, Surrey. GU8 5LH

Tel: 0845 021 2340 Fax: 01428 687936 Info@messagemaker.co.uk www.messagemaker.co.uk

Registered in England & Wales No. 3726273 VAT No. GB 709 3828 15