
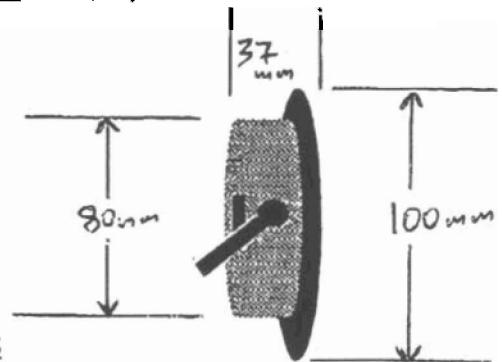



OPERATING INSTRUCTIONS

- Always ensure that both surfaces (Suction Pad & fixing surface, ie Glass, Metal, Ceramics, Acrylics, Polycarbonates, etc..) are both clean & dry before fixing.
- Insert detachable locking key into  on side of chassis. Turn key as shown in diagram (check suction unit is fixed firmly to surface), remove key.
- To release, insert key, (handle points to north), turn key so handle points south and allow 5-10 seconds for vacuum to release. Remove from surface.
- Always store Suction Units in 'OFF' position. **DO NOT** store / lay Suction Pad on unclean or rough & abrasive surfaces.




OPERATING INSTRUCTIONS

- Always ensure that both surfaces (Suction Pad & fixing surface, ie Glass, Metal, Ceramics, Acrylics, Polycarbonates, etc..) are both clean & dry before fixing.
- Insert detachable locking key into  on side of chassis. Turn key as shown in diagram (check suction unit is fixed firmly to surface), remove key.
- To release, insert key, turn clockwise and allow 5-10 seconds for vacuum to release. Remove from surface.
- Always store Suction Units in 'OFF' position. **DO NOT** store / lay Suction Pad on unclean or rough & abrasive surfaces



OPERATING INSTRUCTIONS

- Always ensure that both surfaces (Suction Pad & fixing surface, ie Glass, Metal, Ceramics, Acrylics, Polycarbonates, etc..) are both clean & dry before fixing.
- Insert detachable locking key into  on side of chassis. Turn key as shown in diagram (check suction unit is fixed firmly to surface), remove key.
- To release, insert key, turn clockwise and allow 5-10 seconds for vacuum to release. Remove from surface.
- Always store Suction Units in 'OFF' position. **DO NOT** store / lay Suction Pad on unclean or rough & abrasive surfaces.