




INSTRUCTION MANUAL  
ICM33II / 33RII CLAMP MULTIMETER

EN FR IT DE

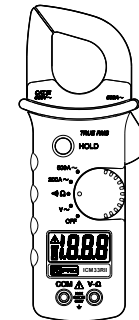

**ICM 33II / 33RII  
CLAMP MULTIMETER  
INSTRUCTION MANUAL**



## **INTRODUCTION**

 
### **1-1 Unpacking and Inspection**

Upon removing your new Digital Clamp Meter from its packing, you should have the following items:

1. Digital Clamp meter.
2. Carrying case.
3. Instruction manual.
4. Test lead set (one black , one red).

### **1-2 Meter Safety**


Terms as Marked on Equipment .

 **ATTENTION** — Refer to manual.

 **DOUBLE INSULATION** — Protection Class II

 **DANGER** — Risk of electric shock.



Symbols in this Manual

 This symbol indicates where cautionary or other information is found in the manual.

 Battery.

**1-3 Front Panel**

Refer to Figure 1 and the following numbered steps to familiarize yourself with the meter's front panel controls and connectors.

- 1. Digital Display** — The digital display has a 3 1/2 digit LCD readout (maximum reading 1999) plus auto polarity, decimal point,  and .
- 2. Input Terminal** — The black test lead is always connected to the "COM" input jack and red test lead is always connected to the "V- $\Omega$ " input jack when measuring ACV and OHMS.
- 3. Function Switch** — Rotate to desired function.
- 4. Data Hold Switch** — Hold display reading for all functions and ranges.

**5. Trigger** — Press the lever to open the transformer jaws. When the pressure on the lever is released, the jaws will close again.

**6. Transformer Jaws** — Designed to pick up the AC current flowing through the conductor.

**7. Hand Guard** — Designed to protect user for safety.

**8. Battery Cover.**

**9. Battery Cover Screw.**

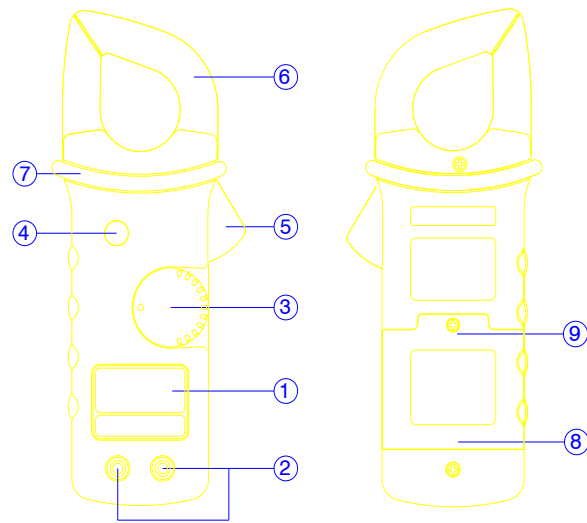


Figure 1


## **SPECIFICATIONS**

### **2-1 General Specifications**

**Display** : 3 1/2 Digital Liquid Crystal Display (LCD) with a maximum reading of 1999.

**Overrange Indication** : "1" indicated, show the real value for "V" function and 600A range of "A" function.

**Measuring Rate** : 4 times per second, nominal.

**Low Battery Indication** :  is displayed when the battery voltage drops below the operating voltage.

### **2-2 Environmental Conditions**

**Indoor Use.**

**Maximum Altitude** : 2000 meter.

**Installation Category** : IEC 1010-1, 600V Cat. III

**Pollution Degree** : 2

**Operating Ambient** : 0°C to + 45°C (below 75% R.H.)

**Storage Temperature** : -20°C to + 60°C (below 80% R.H.) with battery removed.



**Temperature Coefficient** : 0.2 x (specified accuracy) / °C , < 18 °C or > 28°C.

**Power Requirement** : Alkaline 9V.

**Battery Life** : Alkaline 200 hours.

**Shock Proof** : 4 feet drops.

**Maximum Jaw Opening** : 36mm

**Maximum Conductor Size** : 34mm diameter.

**Size** : 200mm (W) x 76mm (L) x 41mm (H)

**Weight** : 360gms (including battery)

**Accessories** : Test leads, battery , manual and carrying case.

This instrument complies with IEC 1010-1 and 1010-02-32.

### 2-3 Electrical Specifications

Accuracy is  $\pm(\% \text{reading} + \text{number of digits})$  at  $23\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$  at less than 75% R.H.

#### (1) AC Voltage : Auto-ranging

Range	Resolution	Accuracy	Overload protection
600V	1V	$\pm(1.2\% \text{ reading} + 3\text{digits})$ 40Hz ~ 500Hz	600V r.m.s.

\* **AC Conversion Type** : Average Sensing rms indication. (33 II)

AC Conversions are ac-coupled, true rms responding , calibrated to the rms value since wave input , the basic accuracy is for sine wave at full scale, for non-sine wave accuracy refer to \*\* (33R II)

**Crest Factor** : 2 to 3, add 1.4% to Accuracy.  
3 to 4, add 3% to Accuracy.

where C.F. =  $\frac{\text{Peak}}{\text{RMS}}$

**Input impedance** :  $2\text{M } \Omega // 2\text{nF}$  approx.

**(2) AC Current : Auto-ranging**

Range	Resolution	Accuracy	Overload protection
200A	0.1A	±(1.9% reading + 5 digits) 50/60Hz	800A
600A	1A	±(1.5% reading + 5 digits) 50/60Hz (for 0 ~ 400A) ±(2.5% reading + 5 digits) 50/60Hz (for 400 ~ 600A)	

\* **AC Conversion Type** : Average Sensing rms indication. (33 II)

AC Conversions are ac-coupled, true rms responding , calibrated to the rms value since wave input , the basic accuracy is for sine wave at full scale, for non-sine wave accuracy reference to \*\* (33R II)

**Crest Factor** : 2 to 3, add 1.4% to Accuracy.  
3 to 4, add 3% to Accuracy.

where C.F. =  $\frac{\text{Peak}}{\text{RMS}}$

**(3) Resistance : Auto - ranging**

Range	Resolution	Accuracy	Max. Open Circuit Voltage	Over voltage protection
2000 $\Omega$	1 $\Omega$	$\pm(1.5\%$ reading + 2 digits)	3V	600V r.m.s.

**(4) Instant Continuity Description :** Internal sounder will operate when resistance is less than 50  $\Omega$  .

**(5) Data Hold :** Hold display reading for all functions and ranges.

**(6) Auto Power Off :** Once the Clamp-On meter is powered on, a timer is activated which will turn the unit off after approximately 30 minutes. If you wish to continue making measurements after the unit automatically powers off, you must switch the function selector to "OFF" and then back to the desired function.

## **OPERATION**

**This instrument has been designed and tested in accordance with IEC Publication 1010, Safety Requirements for Electronic Measuring Apparatus and has been supplied in a safe condition. This instruction manual contains some information and warnings which have to be followed by the user to ensure safe operation and to retain the instrument in safe condition.**

### **3-1 Precautions and Preparations for measurement**

1. Make sure that the battery is properly connected.
2. The instrument should only be operated between 0°C ~ 45°C and at less than 75% R.H.
3. Do not use or store this instrument in a high temperature or high humidity environment and do not store the unit in direct sunlight.
4. Do not replace battery with power on condition.
5. If the unit is not to be used for a long period of time, remove the battery.
6. Do not forget to turn off after use.

7. If the meter is used near equipment that generates electro magnetic noise, the display may be unstable or indicate incorrect measurement values.
8. ⚠ Maximum rated voltage to earth for voltage measurements terminals is 600V CAT. III.
9. When using the instrument as a Voltmeter or ohmmeter never clamp the jaws around or onto a conductor.

**TEST EQUIPMENT RISK ASSESSMENT**

*Users of this equipment and or their employers are reminded that Health and Safety Legislation require them to carry out valid risk assessments of all electrical work so as to identify potential sources of electrical danger and risk of electrical injury such as from inadvertent short circuits. Where the assessments show that the risk is significant then the use of fused test leads constructed in accordance with HSE guidance note GS38 "Electrical Test Equipment for use by Electricians" should be used.*

⚠ THIS INSTRUMENT MUST NOT BE USED ON UNINSULATED CONDUCTORS AT A VOLTAGE  
GREATER THAN 600V ac/dc.

### **3-2 AC Current Measurement**

1. Set the function switch to the desired current position.
2. Open the Spring-loaded clamp by pressing the trigger on the right side of the meter.
3. Position the clamp around the wire or the conductor and release the clamp trigger, make sure that the clamp is entirely closed. The clamp must be positioned around only one conductor of a circuit . If the clamp is placed around two or more current carrying conductors, the meter reading will be FALSE.

### **3-3 AC Voltage Measurement**

1. Set the function switch to the " V ~ " position.
2. Connect the black test lead to the "COM" terminal and the red test lead to the " V-  $\Omega$  " terminal.  
You can now connect the test probes to the circuit to be measured.

### **3-4 Resistance Measurement**

1. Set the function switch at "  $\Omega$  " position.
2. Connect the black test lead to the "COM" terminal and red test lead to the " V-  $\Omega$  " terminal.
3. Verify that the power to the circuit under test is off. Connect test leads to the circuit to make the measurement.

## **MAINTENANCE**

**⚠ WARNING :** TO AVOID ELECTRICAL SHOCK REMOVE TEST LEADS BEFORE OPENING THE COVER.

### **4-1 General Maintenance**


1. Repairs or servicing not covered in this manual should only be performed by qualified personal.
2. Periodically wipe the case with a dry cloth and detergent do not use abrasives or solvents.

### **4-2 Battery Replacement**

**The meter is powered by a single 9V battery. Refer to Figure 2 and use the following procedure to replace the battery.**

1. Disconnect the test leads from the circuit being measured and turn the meter off. Remove the test leads from the front terminals of the meter.
2. Position the meter face down.
3. Remove the battery cover from the instrument by removing the screw and then lifting off the cover.
4. Lift the battery from the case top and carefully disconnect the battery connector leads.
5. Snap the battery connector leads to the terminals of a new battery and reinsert the battery into the case top. Make sure that the battery leads do not become pinched between the case bottom and case top.
6. Replace the case bottom and reinstall the screws.



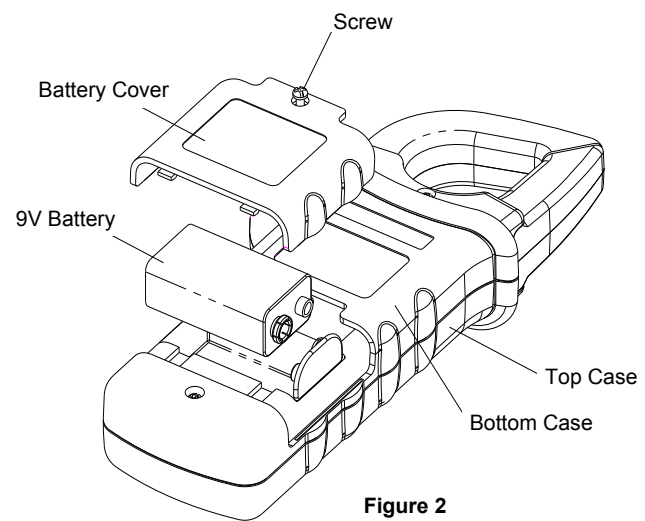

**Figure 2**

**Africa**  
**RS Components SA**  
P.O. Box 12182, Vorna Valley, 1686  
20 Indianapolis Street, Kyalami Business Park,  
Kyalami, Midrand  
South Africa  
[www.rs-components.com](http://www.rs-components.com)

**China**  
**RS Components Ltd.**  
Suite 23 A-C , East Sea Business Centre  
Phase 2 , No. 618 Yan'an Eastern Road  
Shanghai, 200001  
China  
[www.rs-components.com](http://www.rs-components.com)

**Japan**  
**RS Components Ltd.**  
West Tower (12th Floor),  
Yokohama Business Park, 134 Godocho, Hodogaya,  
Yokohama, Kanagawa 240-0005  
Japan  
[www.rs-components.com](http://www.rs-components.com)

**Asia**  
**RS Components Pte Ltd.**  
31 Tech Park Crescent  
Singapore 638040  
[www.rs-components.com](http://www.rs-components.com)

**Europe**  
**RS Components Ltd.**  
PO Box 99, Corby,  
Northants. NN17 9RS  
United Kingdom  
[www.rs-components.com](http://www.rs-components.com)

**U.S.A**  
**Allied Electronics**  
7151 Jack Newell Blvd. S.  
Fort Worth, Texas 76118  
U.S.A.  
[www.alliedelec.com](http://www.alliedelec.com)

**South America**  
**RS Componentes Limitada**  
Av. Pdte. Eduardo Frei M. 6001-71  
Centro Empresas El Cortijo  
Conchali, Santiago, Chile  
[www.rs-components.com](http://www.rs-components.com)