

## ■ Standard couplers and Swiftclip / Swiftgrip


Couplers are required for joining together SRF straight lengths  
SRFC standard couplers are supplied in pairs.

2 x Swiftclips are required for each coupling and are used with tray widths up to and including 300 mm. For 450 mm to 900 mm tray, use Swiftgrip (2 per coupling)

Swiftclip and Swiftgrip are supplied in packs of 10


## ■ Installation using Swiftclip - 75 mm to 300 mm wide tray

For 75 - 300 mm wide SRF tray  
Cat. No. SRFC **F**  
and Swiftclip

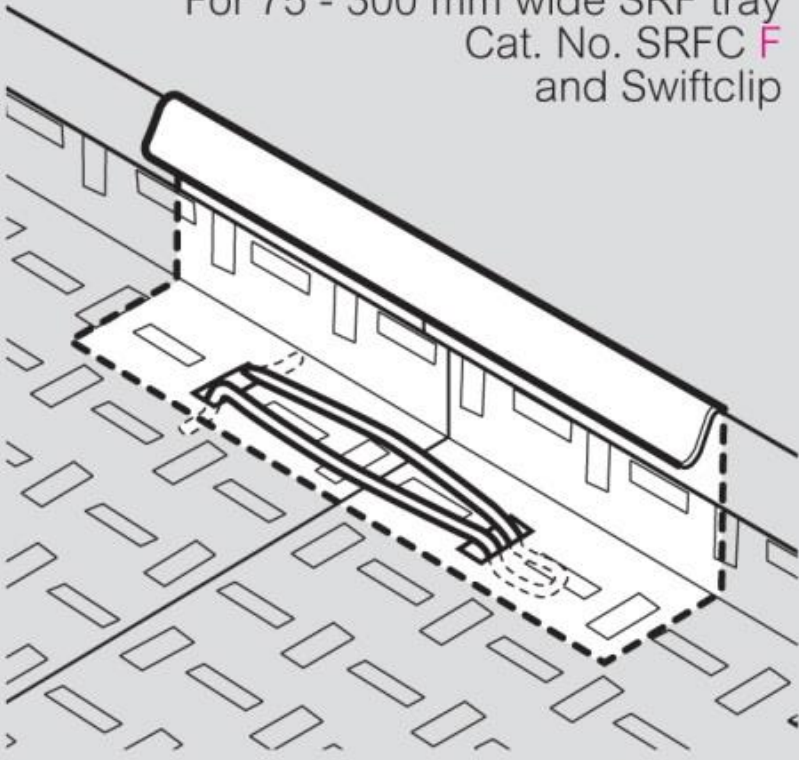


Standard couplers		Swiftclip	
Cat. No.	Tray range	Cat. Nos.	Finish
SRFC <b>F</b>	SRF	SCLPG	PG
		SCLG	G


## ■ Assembly using Swiftclip

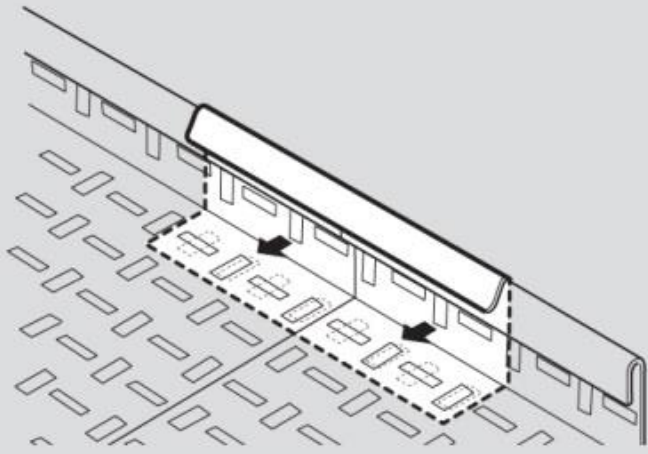


**1. Locate coupler across underside of tray joint**

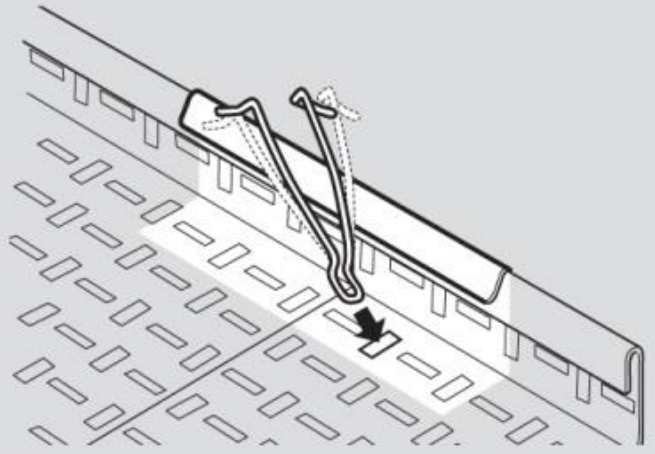

**2. Insert joggled head of clip where tray and coupler align**

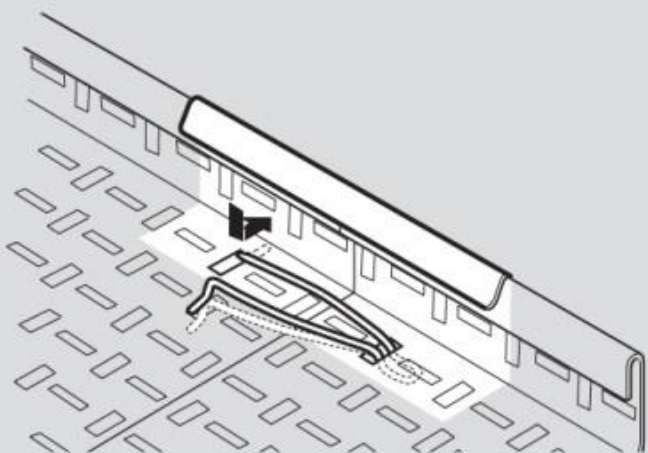

**3. Clip leg nearest tray wall into slot on other tray bed**

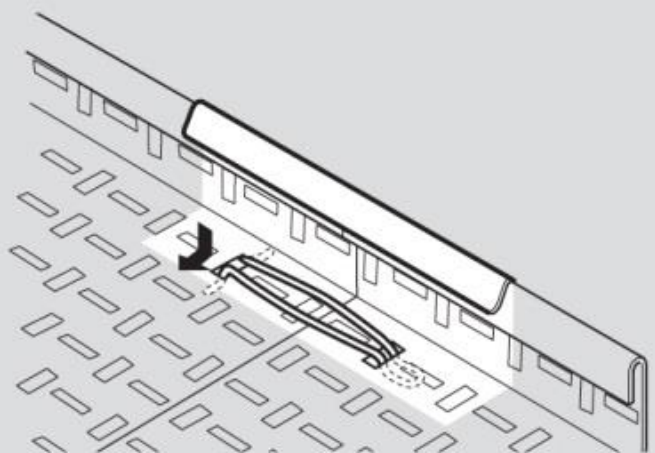

**4. The second leg is pushed towards the wall of the tray and pushed home into the same slot**

Repeat process on the other side of the tray, fitting the clip in the opposite direction

Ensure:

1. Head and feet of clip are clamping through tray and coupler
2. Clip should span across the joint