


## Datasheet

### RS Telecom Cable Assembly Male RJ11 to Male BT431A 3m White RJ11 to BT431A

RS Stock 303-1271



### Dimensions: (mm)

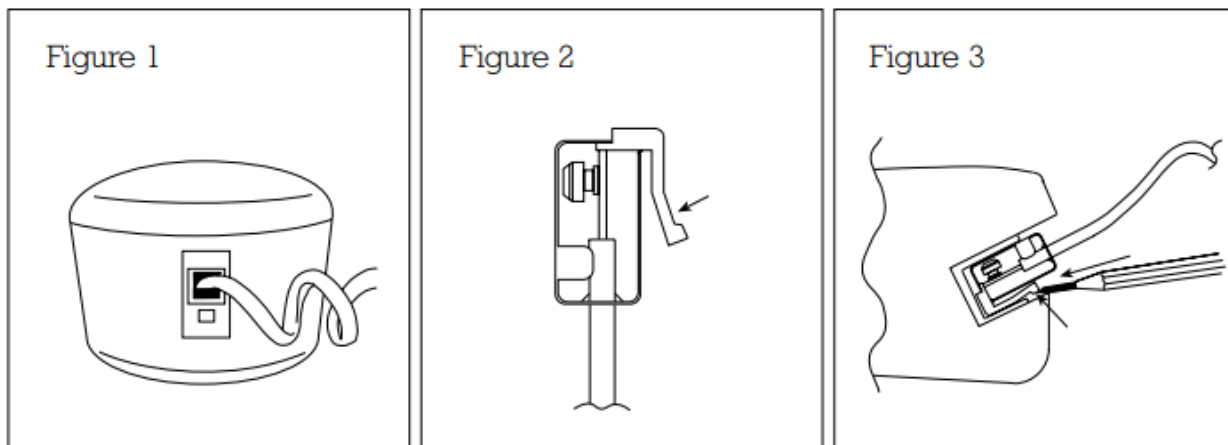



## General

These handset cords give you much more freedom to move around while you are talking, without having to stretch or abandon the phone, and are ideal for wall mounted units.

## Instructions

Before you start, check that the end of your handset has a socket as shown in figure 1, where the cord goes in. There will be a similar socket on the phone base.

1. Disconnect your telephone apparatus from the phone socket.
2. The connectors at each end of the existing handset cord will have a spring catch as shown in figure 2. Using the special catch-release tool, disconnect the handset cord from the phone base by pushing back the spring catch (figure 3) and gently pulling the cord free. Disconnect the other end of the cord from the handset in the same way.
3. Connect the new cord simply by pushing the connectors into the sockets on the phone base and the handset. First connect the short tail end into the handset, followed by the long end into the phone base.
4. Reconnect your telephone apparatus to the phone socket.